


## Engine Dual Radio System US-67D Intercom

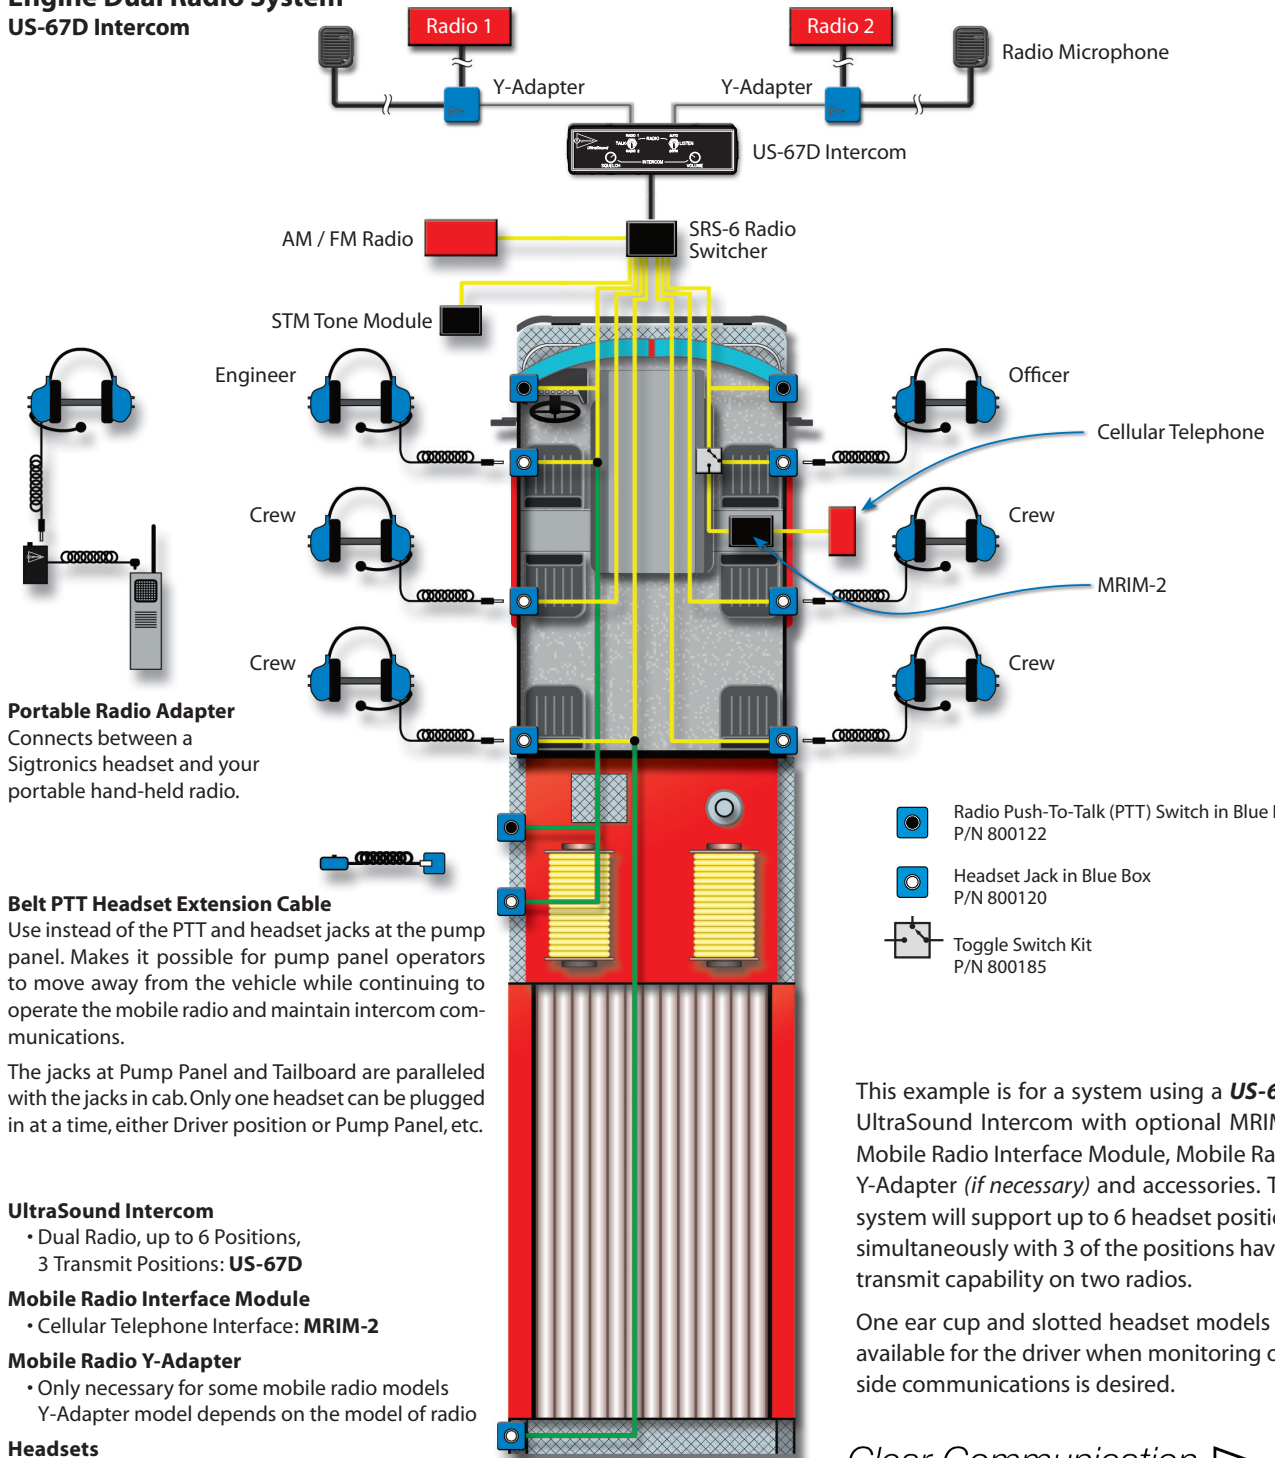

### Portable Radio Adapter

Connects between a Sigtronics headset and your portable hand-held radio.

### Belt PTT Headset Extension Cable

Use instead of the PTT and headset jacks at the pump panel. Makes it possible for pump panel operators to move away from the vehicle while continuing to operate the mobile radio and maintain intercom communications.

The jacks at Pump Panel and Tailboard are paralleled with the jacks in cab. Only one headset can be plugged in at a time, either Driver position or Pump Panel, etc.

### UltraSound Intercom

- Dual Radio, up to 6 Positions, 3 Transmit Positions: **US-67D**

### Mobile Radio Interface Module

- Cellular Telephone Interface: **MRIM-2**

### Mobile Radio Y-Adapter

- Only necessary for some mobile radio models  
Y-Adapter model depends on the model of radio

### Headsets

- Standard Dual Ear Cup, Flex Mic Boom: **SE-8**

### Accessories

- Belt PTT Headset Extension Cable  
15 ft.: P/N 900106 or 30 ft.: P/N 900107
- Toggle Switch Kit: P/N 800185
- Sigtronics Tone Module: STM
- Emergency Radio Switcher: SRS-6
- Portable Radio Adapter (PRA)  
Model: Depends on your portable radio

This example is for a system using a **US-67D** UltraSound Intercom with optional MRIM-2 Mobile Radio Interface Module, Mobile Radio Y-Adapter (if necessary) and accessories. This system will support up to 6 headset positions simultaneously with 3 of the positions having transmit capability on two radios.

One ear cup and slotted headset models are available for the driver when monitoring outside communications is desired.

Clear Communication   
**EVERY TIME**

## Sigtronics Corporation

San Dimas, California

Phone: (909) 305-9399

E-mail: info@sigtronics.com

Web Site: www.sigtronics.com