

The headset is equipped with a stereo / monaural switch on the non-mic side ear cup. For monaural sound or aircraft with only monaural jacks, move the switch to the monaural position. In aircraft equipped for stereo audio, move the switch to the stereo position.

The headset parts may be cleaned with mild soap and water using a soft cloth. Then dry immediately. **Caution: Do Not immerse** any part of the headset in water or any other liquid. Be especially careful not to allow the microphone to become wet! Exposure to moisture may cause internal corrosion and failure and will void your manufacturers warranty.

Cleaning will help the headset maintain its "like new" condition for many years.

WINDSCREEN

The microphone windscreen will reduce annoying wind noise and breath pops picked up by headset microphones. It also protects the microphone element from dirt and moisture. The windscreen should be washed regularly to maintain hygiene and avoid clogging. Wash in warm water and mild soap. Rinse thoroughly and make sure it is completely dry before putting it back on.

To remove the windscreen, take out the screw that holds the microphone on the boom and grasp the windscreen lightly along its entire length and slip it off.

Put the windscreen on the microphone by gently pulling from the open end. Do not pull it so tightly that it stretches against the end of the microphone.

WARRANTY

Your headset is covered by a limited three-year parts and labor warranty. Please see the enclosed warranty card for details.

You may refer to the parts list on the reverse side, if you choose to replace parts yourself. The parts list describes parts for this particular headset only. Parts lists for other models are available on our Web Site or can be obtained by contacting Sigtronics Corporation.



Sigtronics Corporation
178 East Arrow Highway
San Dimas, CA 91773
Phone: 909 305-9399
E-mail: info@sigtronics.com
Web Site: www.sigtronics.com

Model S-40S Headset Instructions

The S-40S series headsets are adjusted at the factory for immediate use with all current standard radio systems in general aviation aircraft. Headsets equipped with two plugs are the standard configuration. The headphone plug is the larger diameter plug and should be inserted into the headphone jack (.250" standard monaural jack). The mic plug is the smaller diameter plug and should be inserted into the microphone jack (.206" standard microphone jack).

The headband is adjustable through a full range of motion, or the locking nuts may be tightened to allow you to custom fit the headset. Place the headset over your head, adjust the slides up until minimum pressure is felt on the top of your head. The headset is now properly adjusted. For maximum noise attenuation, the clamping pressure has been set at the factory. Releasing the clamping pressure by bending the headband is not advised, because loss of attenuation will result. **Note:** If especially small (children) or large headbands are needed, they may be ordered from Sigtronics.


The microphone boom is fully adjustable and will rotate 360 degrees for use on the left or right side of the head. The locking screw that secures the boom to the ear cup is factory set to insure the correct tension. Turning it will not change the tension, because the nut on the inside of the cup will turn as well. **Microphone placement should be at the corner of the mouth, approximately 1/4" from the lips.** The exclusive thumbscrew on the mic boom may be used to assure proper adjustment.

When you first connect the headset, turn the volume controls on the headset to maximum (full clockwise on mic side, counterclockwise on pot side), then adjust the listening volume with the audio control of either your radio or intercom as appropriate. Passengers should also turn their individual headset volumes up fully. Doing this allows for a full range of adjustment for each passenger, since those with the most acute hearing can turn their headset volume down, if necessary.

continued on back...



...when it counts!

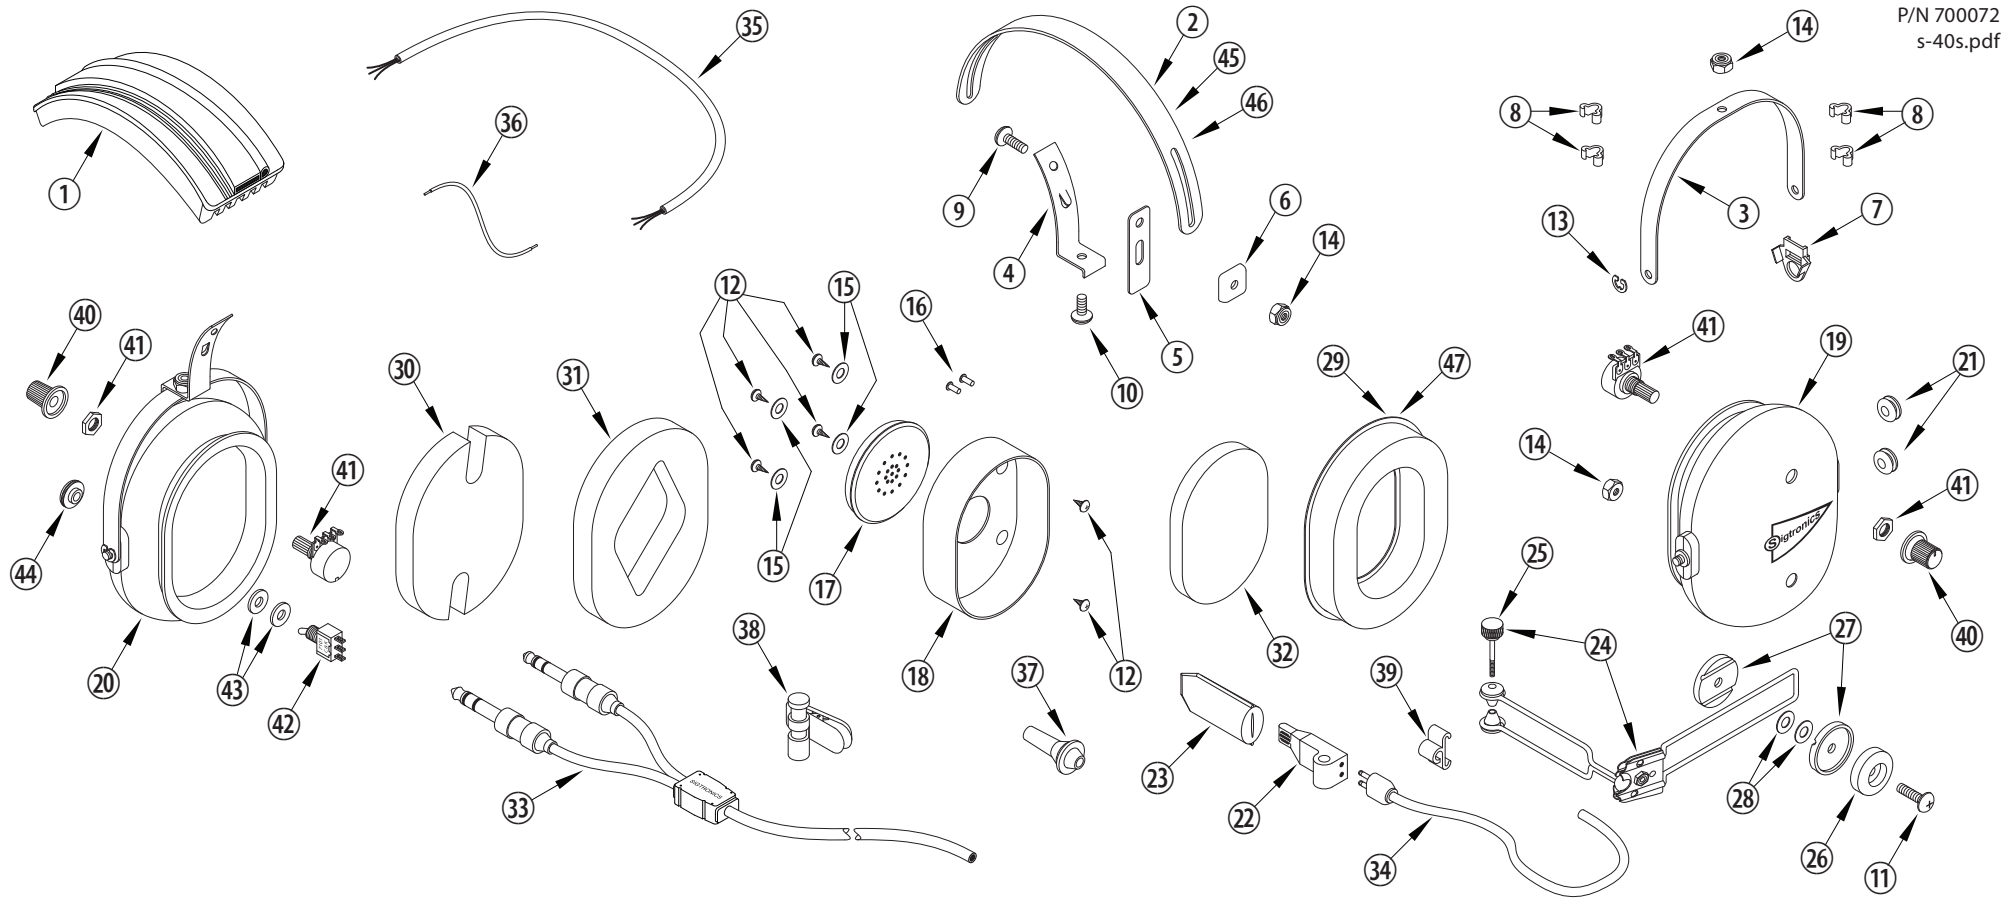

SIGTRONICS S-40S HEADSET PARTS IDENTIFICATION BREAKDOWN

ITEM	P/N	DESCRIPTION	ITEM	P/N	DESCRIPTION	ITEM	P/N	DESCRIPTION
1	800145	HEADBAND, WITH CUSHION, S-40	17	100083	RECEIVER, 300 OHM, STEREO	33	800012	CABLE, HEADSET, STEREO
2	100383	HEADBAND, METAL, STANDARD	18	100423	RECEIVER MOUNT, HEADSET, STEREO	34	800039	CABLE, MICROPHONE BOOM, 12 INCH
3	100367	YOKE, EAR CUP MOUNT, METAL	19	100939	EAR CUP, PRINTED AND DRILLED, MICROPHONE SIDE	35	100162	WIRE, 3 CONDUCTOR, #24, BLACK, 28.5 INCHES
4	100384	BRACKET, YOKE SUPPORT WITH TANG	20	100940	EAR CUP, PRINTED AND DRILLED, VOLUME CONTROL SIDE	36	100935	WIRE, #22, JUMPER, HEADSET, 4 INCH
5	100373	SLIDE, YOKE BRACKET, LONG, NYLON	21	100049	GROMMET, 5/16 INCH, RUBBER	37	100569	STRAIN RELIEF, CABLE
6	100258	CLIP, HEADBAND GUIDE, PLASTIC	22	800078	MICROPHONE, ELECTRET, M-90	38	100579	CLIP, CLOTHING, HEADSET CABLE
7	100393	CLIP, ANTI-ROTATION, YOKE, PLASTIC	23	900084	WINDSCREEN, MICROPHONE	39	100371	MICROPHONE CABLE CLIP
8	100362	CLIP, CROSS-OVER, WIRE, PLASTIC	24	100249	BOOM, ELECTRET MICROPHONE SUPPORT, SWIVEL	40	100360	KNOB, BLACK, VOLUME
9	100363	SCREW, 8-32 X 1/2, PHILLIPS HEAD	25	100156	SCREW, THUMB, MICROPHONE BOOM, 2-56 X 1	41	100365	POTENTIOMETER, 2K
10	100364	SCREW, 8-32 X 3/8, PHILLIPS HEAD	26	100368	KNOB, MICROPHONE BOOM ADAPTER, PLASTIC	42	100509	SWITCH, STEREO / MONO
11	100377	SCREW, 8-32 X 5/8, PHILLIPS HEAD	27	100408	WASHER, GROOVED BOOM	43	100508	WASHER
12	100108	SCREW, 4-40 X 1/4, THREAD FORMING	28	100385	WASHER, SPRING, BOOM ADAPTER	44	100507	NUT, STEREO / MONO SWITCH
13	100251	E-RING, EAR CUP TO YOKE RETAINER	29	100369	EAR SEAL, FOAM FILLED	45	100257	OPTIONAL - HEADBAND, METAL, LARGE
14	100252	NUT, HEX, 8-32, LOCKING	30	100374	FOAM, SOUND ATTENUATING. NOTCHED, 1/2 INCH	46	100618	OPTIONAL - HEADBAND, METAL, YOUTH
15	100135	WASHER	31	100376	FOAM, SOUND ATTENUATING. RECEIVER HOLE, 1/2 INCH	47	100402	OPTIONAL - EAR SEAL, GEL FILLED
16	100130	TERMINAL, SOLDER	32	100379	FOAM, SOUND ATTENUATING, RECEIVER COVER, 1/4 INCH			